

User Manual

CG-3.6K, CG-4K, CG-4.6K, CG-5K, CG-6K



V1.1

CONTENTS

1 NOTES ON THIS MANUAL	- 3 -
1.1 VALIDITY	- 3 -
1.2 SYMBOLS IN THIS DOCUMENT	- 3 -
1.3 STORAGE	- 5 -
2 OVERVIEW	- 5 -
2.1 PRODUCT INTRODUCTION	- 5 -
2.2 APPEARANCE	- 6 -
3 INSTALLATION	- 7 -
3.1 CHECK FOR PHYSICAL DAMAGE	- 7 -
3.2 PACKING LIST	- 7 -
3.3 MOUNTING	- 8 -
3.4 SPACE REQUIREMENT	- 9 -
3.5 MOUNTING STEPS	- 9 -
4 ELECTRICAL CONNECTION	- 11 -
4.1 GRID CONNECTION	- 11 -
4.2 EARTH CONNECTION	- 12 -
4.3 PV CONNECTION	- 12 -
4.4 WIFI/GPRS CONNECTION (OPTIONAL)	- 13 -
4.5 TURN-OFF THE INVERTER	- 14 -
5 POWERING ON THE SYSTEM	- 14 -
5.1 SUGGESTED START-UP THE INVERTER	- 14 -
5.2 FIRST RUN TIME SETTING	- 15 -
5.3 NOTES ON PV SIMULATION SOURCES	- 15 -
6 LCD OPERATION	- 16 -
7 MAINTENANCE AND CLEANING	- 17 -

7.1 MAINTAIN PERIODICALLY	- 17 -
7.2 TROUBLE SHOOTING	- 17 -
8 DECOMMISSIONING	- 18 -
8.1 REMOVE THE INVERTER	- 18 -
8.2 PACKAGING	- 18 -
8.3 STORAGE AND TRANSPORTATION	- 18 -
9 TECHNICAL DATA	- 19 -
10 MANUFACTURER WARRANTY	- 20 -
11 CONTACT	- 20 -

1 Notes on this manual

1.1 Validity

This manual describes the assembly, installation, commissioning and maintenance of the following inverter model:

CG-3.6K, CG-4K, CG-4.6K, CG-5K, CG-6K;

Target Group

This manual is for qualified personnel. Qualified personnel have received training and have demonstrated skills and knowledge in the construction and operation of this device. Qualified personnel are trained to deal with the dangers and hazards involved in installing electric devices.

Additional information

Find further information on special topics in the download area at our website. The manual and other documents must be stored in a convenient place and be available at all times. We assume no liability for any damage caused by failure to observe these instructions. For possible changes in this manual, accept no responsibilities to inform the users.

1.2 Symbols in this document

Please pay close attention to all the symbols for the purpose of avoiding possible personal injury or equipment break down.

Symbol	Description
 DANGER	DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.
 WARNING	WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.
 CAUTION	CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
 NOTICE	NOTICE is used to address practices not related to personal injury.
 Information	Information that you must read and know to ensure optimal operation of the system.

Markings on this product

Symbol	Explanation
	Caution, risk of electric shock.
	Caution, hot surface.
	Operation after 5 minutes.
	Read the manual.
	Point of connection for grounding protection.
	CE mark. The inverter complies with the requirements of the applicable CE guidelines.
	The inverter must not be disposed of with the household waste.
 <div style="background-color: red; color: white; padding: 2px 5px; display: inline-block;"> Warning: High Temperature! 高温危险! </div> <p>Never touch the enclosure of an operating inverter. 逆变器工作时严禁触摸外壳。</p>	Burn warning. Do not touch an operating inverter because it generates high temperatures on the shell.

1.3 Storage

The following requirements should be met if the inverter is not put into use directly.

- ◆ Do not unpack the inverter.
- ◆ Keep the storage temperature at -25°C to +60°C and the humidity at 5%-95% RH (non-condensing)
- ◆ The inverter should be stored in a clean and dry place and be protected from dust and water vapor corrosion.
- ◆ The number of stacking layers of multiple inverters shall not exceed the limit of stacking layers marked on the outer box.
- ◆ Periodic inspections are required during the storage. Replace the packing materials if necessary.
- ◆ If the inverter has been stored for half a year or more, inspections and tests should be conducted by qualified personnel before it is put into use.

2 Overview

2.1 Product Introduction

Function


The inverters is a single-phase grid-tied PV string inverter that converts the DC power generated by PV strings into AC power and feeds the power into the power grid.

Models

This document involves the following product models:

CG-3.6K, CG-4K, CG-4.6K, CG-5K, CG-6K.

2.2 Appearance

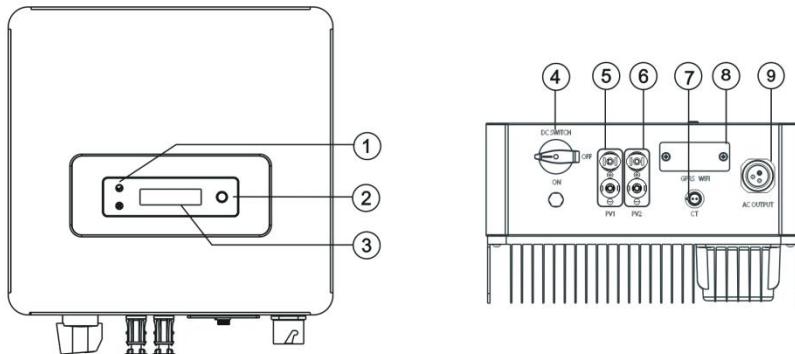

① LED indicator ② Function button ③ LCD display ④ DC switch ⑤ DC input terminals (PV1)
 ⑥ DC input terminals (PV2) ⑦ CT ⑧ GPRS/WIFI output port ⑨ AC output port

LED indicator description

Category	Status	Meaning
LED 1	Blinking green at short intervals	Waiting status
	Blinking green at long intervals	Self-check
	Steady green	Normal status
LED 2	Blinking red at short intervals	Alarm
	Steady red	Fault
	Off	Faultless

Function button description

Status	Description
Short press (0.5s)	Down: Move cursor to downside or decrease value.
Long press (2s)	Enter: Confirm the selection.

3 Installation


3.1 Check For Physical Damage

Make sure the inverter is intact during transportation. If there is any visible damage, such as cracks, please contact your dealer immediately.

3.2 Packing List

Open the package and take out the product, please check the accessories first.

The packing list shown as below.

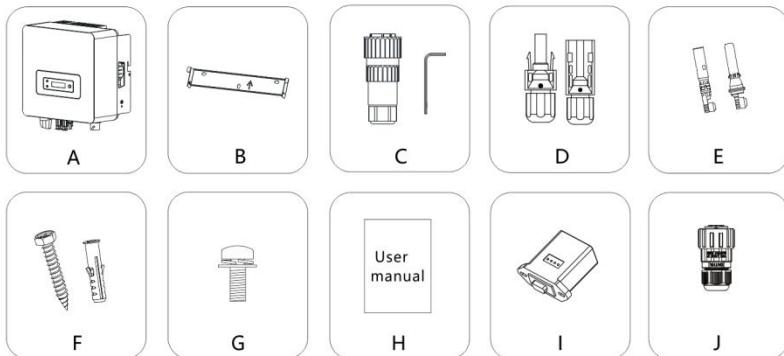

Object	Description	Quantity
A	Inverter	1
B	Bracket	1
C	AC connector	1
D	PV connectors (2*positive, 2*negative)	2/2
E	PV pin connectors (2*positive, 2*negative)	2/2
F	Expansion tubes/Set screw	3/3
G	Set screw (for mounting)	2
H	User manual	1
I	WiFi/GPRS module (optional)	1
J	CT connectors (optional)	1

3.3 Mounting



- ◆ Please wear gloves or other protective equipment throughout the installation process to avoid accidental scratches.


Installation Precaution

CG-3.6~6K series inverter is designed for outdoor installation. (IP 66)


Make sure the installation site meets the following conditions:

- ◆ Not in direct sunlight.
- ◆ Not in areas where highly flammable materials are stored.
- ◆ Not in potential explosive areas.
- ◆ Not in the cool air directly.
- ◆ Not in environment of precipitation or humidity. (>95%)
- ◆ Under good ventilation condition.
- ◆ The ambient temperature should be kept below 45°C to ensure optimal operation.
- ◆ The wall hanging the inverter should meet conditions below:
 1. Solid brick/concrete, or strength equivalent mounting surface;
 2. Inverter must be supported or strengthened if the wall's strength isn't enough. (such as wooden wall, the wall covered by thick layer of decoration)


Please avoid direct sunlight, rain exposure, snow laying up during.

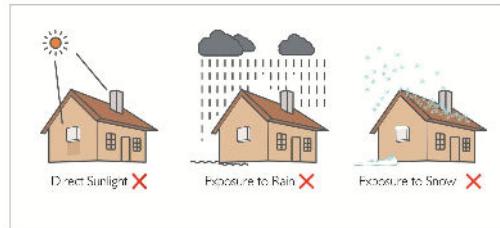

- ◆ The slope of the wall should be within 15°.

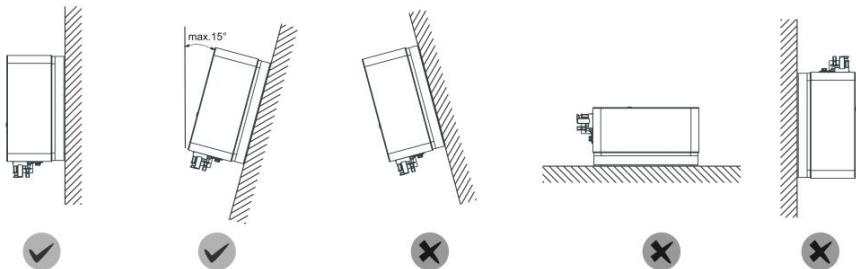



3.4 Space Requirement

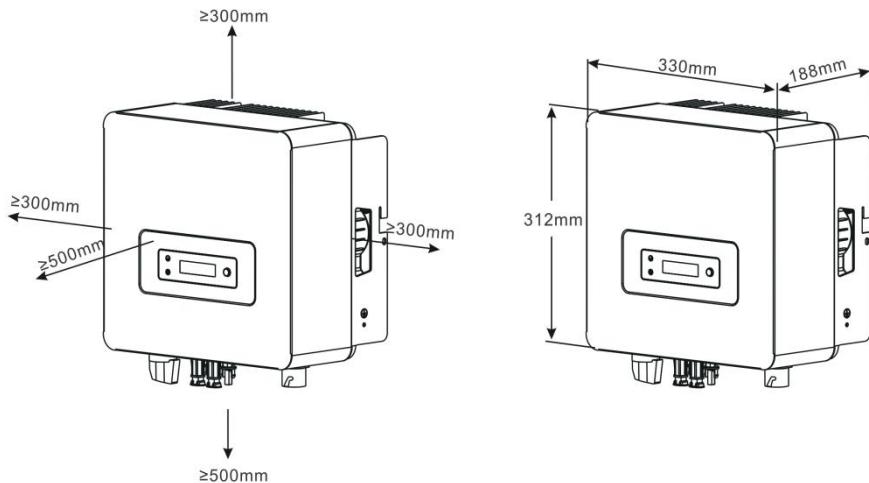


3.5 Mounting Steps

1. Use the wall bracket as a template to mark the position of the 3 holes on the wall.
2. Drill holes with driller, make sure the holes are deep enough (at least 60mm) for installation, and then tighten the expansion tubes.
3. Install the expansion tubes in the holes, and tighten them. Then install the wall bracket by using the expansion screws. ($\Phi 10$ driller, torque: $2.5\pm0.2\text{N}\cdot\text{m}$)
4. Hang the inverter over the bracket, move the inverter close to it, slightly lay down the inverter, and make sure the 3 mounting bars on the back are fixed well with the 3 grooves on the bracket.


5. After confirming the inverter is fixed reliably, fasten two M5 safety-lock sockets head cap screws on the right or left side firmly to prevent the inverter from being lifted off the bracket (Torque: $2.0\pm0.2\text{N}\cdot\text{m}$)

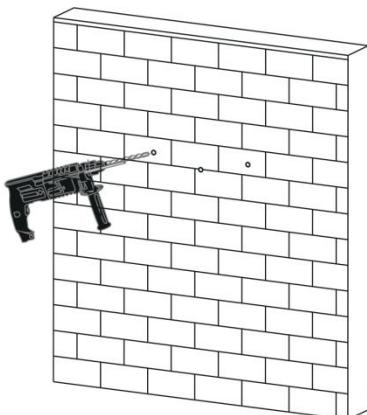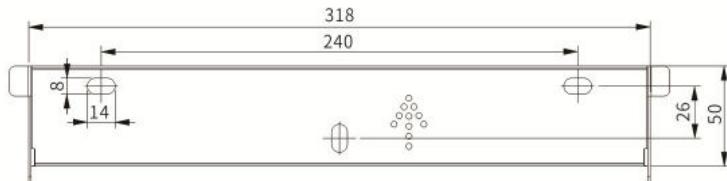


①

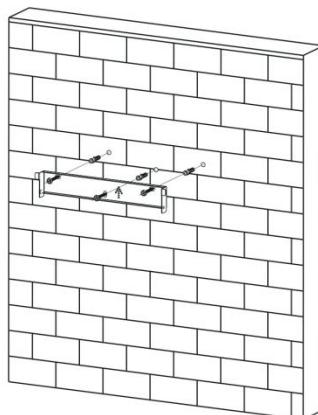

②

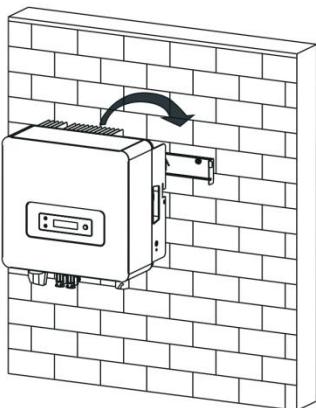

③

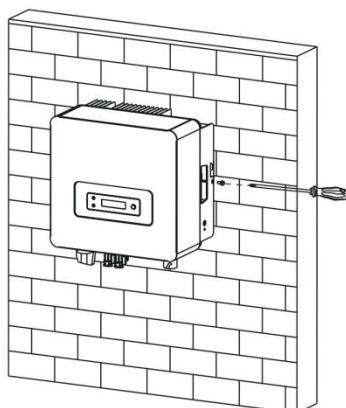

④

4 Electrical Connection


4.1 Grid Connection


CG-3.6~6K series inverter are designed for single phase grid. Voltage is 220/230/240V, frequency is 50/60Hz. Other technical requests should comply with the requirement of the local public grid. Micro-breaker should be installed between inverter and grid, any load should not be connected with inverter directly.

Connection Steps:

1. Choose the appropriate wire. (Cable size: refer to table3)
2. Remove 10mm of insulation from the end of wire.
3. Thread cables through pressure screw, seal ring, threaded sleeve in sequence.
4. Insert the stripped and bared conductors L, N, PE into the screw terminals with sign L, N, PE on the socket element and tighten the screws firmly.
5. Plug the socket into AC output terminal, clockwise rotation to tighten the socket.

Table 3 Cable recommended

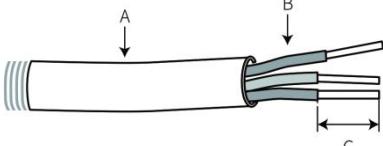	A	Diameter	10-14mm
	B	Area	4-6mm ²
	C	Length	10mm

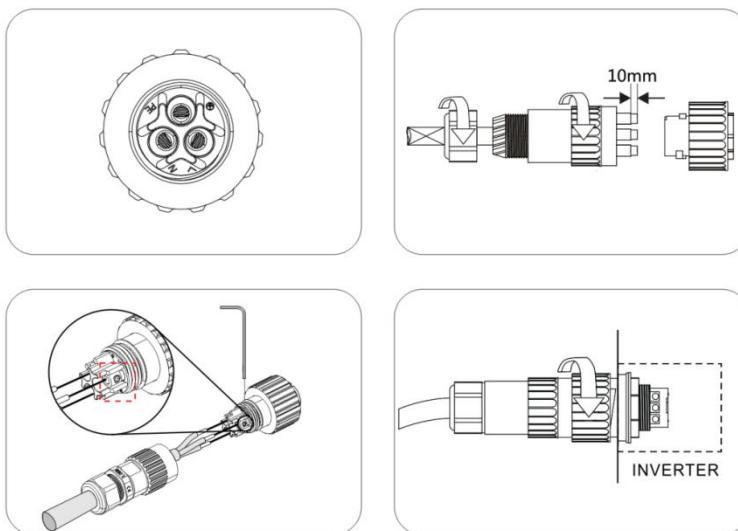


4.2 Earth Connection

Users must additionally earth the inverter to the enclosure of a second earthing or equipotential bonding. This prevents electric shock if the original protective conductor fails.

Earth Connection Steps:

1. Strip the earthing cable insulation and insert the stripped cable into the ring terminal, then clamp it.
2. Place the ring terminal into the earthing rod and screw the earthing screw tightly.

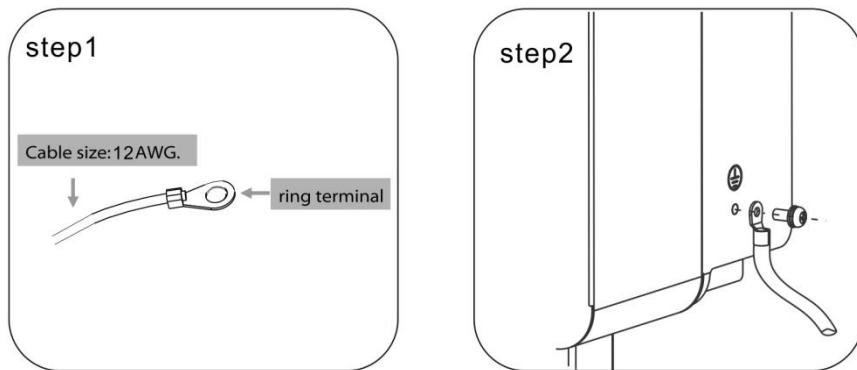

4.3 PV connection

◆ Conditions for DC Connection

The inverter has 1 independent input. Notice that the connectors are in paired (male and female connectors). The connectors for PV arrays and inverters are H4 connectors;

 DANGER	<p>The solar modules connected to the inverter must conform to the class A requirements of the IEC 61730 standard.</p>
 CAUTION	<p>If the inverter is not equipped with a DC switch but this is mandatory in the country of installation, install an external DC switch. The following limit values at the DC input of the inverter must not be exceeded 14A.</p>

◆ Connecting the PV array


 <p>DANGER</p>	<p>Danger to life due to lethal voltages!</p> <ul style="list-style-type: none"> ◆ PV array supplies DC voltage to inverter when exposed to light, before connecting the PV array, cover some light screens above PV arrays, ensure that the DC switch and AC breaker are disconnect from the inverter. NEVER connect or disconnect the DC connectors under load. ◆ Make sure the maximum open circuit voltage (Voc) of each PV string is less than the maximum input voltage of the inverter. ◆ Check the design of the PV plant. The max. open circuit voltage, which can occur at solar panels temperature of -10°C, must not exceed the max. input voltage of the inverter.
 <p>CAUTION</p>	<ul style="list-style-type: none"> ◆ Improper operation during the wiring process can cause fatal injury to operator or unrecoverable damage to the inverter. Only qualified personnel can perform the wiring work. ◆ Please don't connect PV array positive or negative pole to the ground, it could cause serious damages to the inverter. ◆ Check the connection cables of the PV modules for correct polarity and make sure that the maximum input voltage of the inverter is not exceeded.

Connection Steps:

1. Choose the 12AWG wire to connect with the cold-pressed terminal.
2. Remove 7mm of insulation from the end of wire.
3. Insert the insulation into pin contact and use crimping plier to clamp it.
4. Insert pin contact through the cable nut to assemble into back of the male or female plug.

When you feel or heard a "click" sound the pin contact assembly is seated correctly.

5. Plug the PV connector into the corresponding PV connector on inverter.


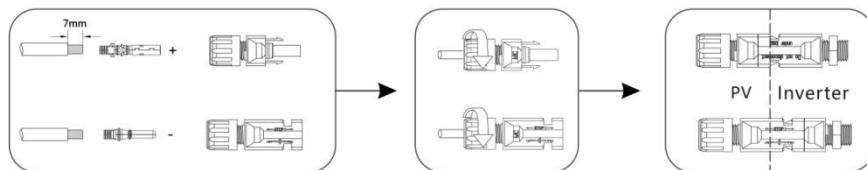


4.4 WiFi/GPRS Connection (optional)

Inverter provides a WiFi/GPRS port, which can collect data from inverter and transmit it to monitoring-website via a WiFi/GPRS module.

Please refer to the accessory manual for specific configuration.

1. Align the serial port of the WiFi/GPRS module with the inverter and plug it in tightly.
2. Fasten the WiFi/GPRS module to the inverter with the screw.

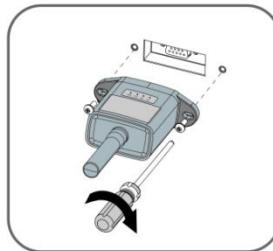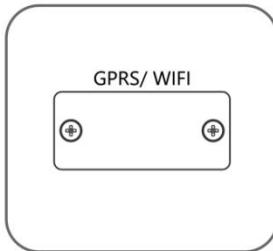

4.5 Turn-off the Inverter

CAUTION	Do not disconnect the DC connectors under load.
---------	---

Turn-off the inverter step:

1. Disconnect the line circuit breaker from single-phases grid and prevent it from being reactivated.
2. Turn off the DC switch.
3. Check the inverter operating status.
4. Waiting until LED, OLED have gone out, the inverter is shut down.

5 Powering On the System

CAUTION	Before turn on the AC switch between the inverter and the power grid, use a multimeter set to the AC position to check that the AC voltage is within the specified range.
---------	---

5.1 Suggested Start-up the inverter

1. Turn on the AC switch between the inverter and the power grid.
2. If there is a DC switch between the PV string and the inverter, turn on the DC switch.
3. Turn on the DC switch at the bottom of the inverter.
4. Observe the LEDs to check the operating status of the inverter.

5.2 First run time setting

When the inverter is used for the first time, please set the time first. Set the current time, then confirm and save.

5.3 Notes on PV simulation sources


When using PV simulation source testing, you need to start the inverter according to the following steps, otherwise the inverter may be damaged. The inverter manufacturer does not assume after-sales responsibility for machine damage caused by incorrect operation.

- 1.Turn on the DC switch at the bottom of the inverter.
- 2.Set the output parameters of the PV simulation source according to the inverter DC input limit. (the inverter input voltage must be less than the maximum PV input voltage on the inverter nameplate; the inverter input current must be less than the maximum PV input current on the inverter nameplate)
- 3.Start PV simulation source.
- 4.Keep the DC switch to "ON" during the test.

6 LCD Operation

The main interface is the default interface, the inverter will automatically turn to this interface when the system started up successfully or no manual operation for a period of time.

Menu interface

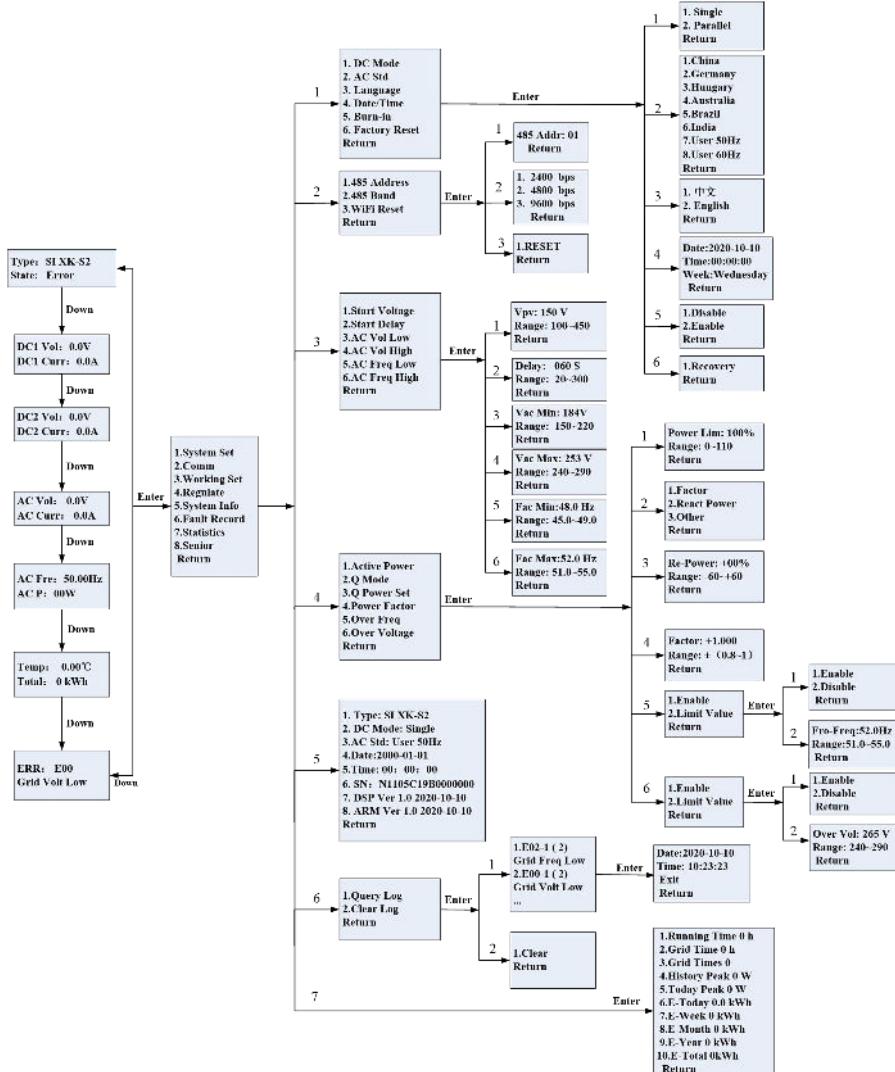

7 Maintenance and Cleaning

7.1 Maintain Periodically

1. Checking Heat Dissipation

If the inverter regularly reduces its output power due to high temperature, please improve the heat dissipation condition. Maybe you need to clean the heat sink.

2. Cleaning the Inverter

If the inverter is dirty, turn-off the AC breaker and DC switch, waiting the inverter shut down, then clean the enclosure lid, the display, and the LEDs using only a wet cloth. Do not use any cleaning agents. (e.g. solvents or abrasives)

3. Checking the DC switch

Check for externally visible damage and discoloration of the DC switch and the cables at regular intervals. If there is any visible damage to the DC switch, or visible discoloration or damage to the cables, contact the installer.

7.2 Trouble shooting

Our quality control program assures that every inverter is manufactured to accurate specifications and is thoroughly tested before leaving our factory. If you have difficulty in the operation of your inverter, please read through the following information to correct the problem.

Alarm ID	Alarm Name	Suggestion	Alarm ID	Alarm Name	Suggestion
E0	Grid Volt Low	Check the AC voltage frequency range	E16	Remote Off	Check background instructions
E1	Grid Volt High		E17	Reserved	
E2	Grid Freq Low		E18	SPI Comm Fault	
E3	Grid Freq High		E19	Reserved	
E4	Bus Volt Low		E20	GFCI over Fault	
E5	Bus Volt High	Check PV input voltage range	E21	GFCI Dev. Fault	Restart the inverter, if the fault does not disappear, contact the manufacturer
E6	Reserved		E22	Volt Cons Fault	
E7	Isolation Fault	Check PV impedance to ground	E23	Curr inconsiste	
E8	Input Curr Over	Check the PV panel configuration	E24	Freq inconsiste	
E9	Hard Curr Over	Restart the inverter, if the fault does not	E25	GFCI inconsiste	
E10	Inv Curr Over		E26	Soft start fail	
E11	Inv DC1 Over		E27	Reserved	

E12	Amb Temp Over	disappear, contact the manufacturer	E32	DSP Comm Fault	
E13	Sink Temp Over		E33	Login Fault	
E14	AC Relay Fault		W16	Clock Warn	Replace the internal button pool
E15	Reserved		W03	Power is zero	Normal shutdown at low power

8 Decommissioning

8.1 Remove the Inverter

- ◆ Disconnect the inverter from DC input and AC output.
- ◆ Wait for 5 minutes for de-energizing.
- ◆ Disconnect communication and optional connection wires.
- ◆ Remove the inverter from the bracket.
- ◆ Remove the bracket if necessary.

8.2 Packaging

- ◆ Please pack the inverter with the original packaging.
- ◆ If the original package is no longer available, you can also use an equivalent carton that meets the following requirements.

8.3 Storage and Transportation

- ◆ Store the inverter in a dry environment where ambient temperature keep always between -25°C~+60°C.
- ◆ When the inverter or other related components need to be disposed. Have it carried out according to local waste handling regulations. Please be sure to deliver wasted inverters and packing materials to certain site, where can assist relevant department to dispose and recycle.

9 Technical Data

Model	CG-3.6K	CG-4K	CG-4.6K	CG-5K	CG-6K
Input Data					
Max. PV input power	4.7kW	5.5kW	6kW	6.5kW	7.8kW
Max. PV input voltage	550V				
Operation voltage range	80V-540V				
Number of independent MPPT/strings per MPPT	2/1				
MPPT max. current	14A/14A				
MPPT max. short circuit current	18A/18A				
AC Output Data					
Rated output power	3.6kW	4kW	4.6kW	5kW	6kW
Max. output power	4kW	4.4kW	5kW	5.5kW	6.6kW
Rated output voltage	220/230V±20%				
Rated output frequency	50Hz,60Hz±5Hz				
Rated output current	15.7A	18A	20A	21.8A	26.1A
Max. output current	17.3A	20A	22A	24A	29A
Power factor	±0.8				
THDi	<3%				
Grid system pattern	L+N+PE				
Efficiency					
Max. efficiency	97.6%				
Europe efficiency	96.8%				
General Data					
Dimensions (L/W/H) in mm	330/188/312				
Weight	11.4kg				
Operation temperature range	-25°C ... +60°C				

Heat dissipation mode	Natural
IP class	IP66
Features	
LCD display	Yes
Communication interface	WiFi/4G/GPRS/RS485(optional)

10 Manufacturer Warranty

Please refer to the warranty card.

11 Contact

If you have technical problems concerning our products, contact your installer or manufacturer.

During inquiring, please provide below information:

- 1.Inverter type
- 2.Modules information
- 3.Communication method
- 4.Serial number of inverters
- 5.Error code of inverters
- 6.Display of inverter LCD



SOCIETE INDUSTRIELLE ET COMMERCIALE D'APPAREILS DOMESTIQUE SICAD COALA

Address: Industrial zone BP143 Sidi Bouzid 9100 Tunisia

Cont: +216 76 622 120

+216 76 627 92

www.coala-tunisie.com

info@coala-tunisie.com